

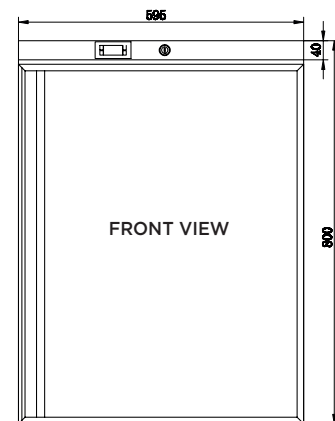


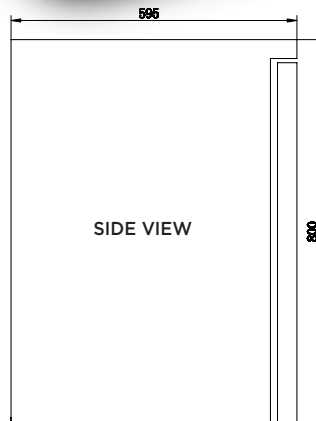

MED0140GD | Bromic MediFridge™ Display Chiller 145L

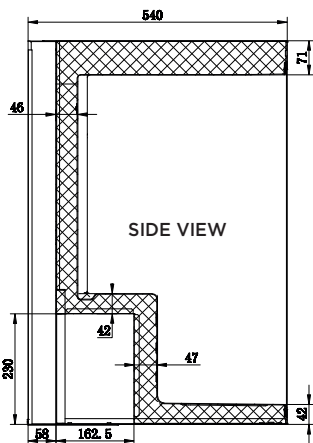

FEATURES

- Integrated temperature Alarm System ensures sensitive stock is maintained and managed according to requirements
- Fan Forced air circulation ensures even temperature throughout the unit
- Increased air circulation around the unit thanks to unique custom wire 'open rung' shelves at the top and bottom to prevent overstocking
- Consistent air circulation throughout the unit ensures mandated temperatures of 2°C to 8°C
- Backed by Bromic national services & warranty

DIMENSIONS

	External (mm)	Internal (mm)
Width	595	491
Depth	595	510
Height	820	687

BROMIC Pty Ltd reserve the right to alter specifications without notice.



MED0140GD | Bromic MediFridge™ Display Chiller 145L

SPECIFICATIONS

Part Number	3736213	External (mm)	Internal (mm)
Capacity	145L	Width	595 491
Weight	40kg	Depth	595 510
Air Circulation	Fan-Forced	Height	820 687
Temperature	Range+	+2°C to 8°C	
	Max Ambient Temperature	30°C	
	Min/Max Temp Recorder	Yes	
	Display	Digital	
Exterior Finish	Material	Powder Coated Sheet Metal	
	Solid or Glass	Low-E Glass + Argon Gas	
Door	Shape	Flat	
	Self-Closing	Yes	
	Door Lock	Yes	
	Door Style	Right hand hinged	
	Door opening (W x H)	595mm x 687mm	
	Reversible	No	
	No. of Shelves	4	
Shelves	Style of Shelves	PVC Coated Wire open rung 7mm apart	
	Depth of Shelf	3 Shelves at 365 mm 1 Shelf at 235 mm	
	Adjustable	Yes (middle 2 shelves only)	
Electrical	Voltage	240V	
	Frequency	50Hz	
	Input Power	170W	
	Power Consumption	1.26kWh/24hr	
Refrigeration System	Refrigerant Type	R134a	
	Electronic Controller	Digital	
Australian Standard Plug	Type	Yes, 10A	
Alarms	Temperature	Yes	
	Door	Yes	
	Audible & Visual	Yes	
Lighting	LED Internal Light	Yes	
Defrost	Automatic	Yes	
	Type of Defrost System	OFF Cycle	
Insulation Type	Cyclopentane		
Footing	30mm Feet at Front. Rollers at back		
Approvals	Quality Care Pharmacy Program Compliance - Cold Chain Testing (QCPP), MEPS, The Pharmacy Guild of Australia		
Warranty	5 year warranty		
Data Logger	Available, part #350700050		

BROMIC Pty Ltd reserve the right to alter specifications without notice.